



MiniVault[®]

GV1050-19

MultiVault[®]

GV2050-19

FASTER. SAFE. TOUGH.



Index

»» Product Features	3
Battery Installation	
Programming	
Resetting Passcode	
»» Safety Features	4
Tamper Detect Feature	
Low Battery Warning Indicator	
Security Sleep Mode	
»» Drawer Removal and Installation	4
»» Mounting the Unit	5
»» Security Cable Instructions	5
»» Warnings	6
»» GunVault Exclusive 5 Year Warranty	7
»» Warranty Registration	8

GunVault The Leaders in Responsible Firearm Storage

Since 1990, **GunVault** has been an industry leader and innovator of quick access personal safes. We pride ourselves on our commitment to manufacture a responsible firearm storage solutions with the highest in quality and patented design. At **GunVault** we understand that in a time of crisis you rely on the security and protection GunVault provides.

Thank you for your trust and welcome to the **GunVault** family.

Product Features

(MiniVault / MultiVault)

- 1 **Keypoint**
- 2 **Backlit Keypad**
- 3 **Battery Holder**
(Located on the inside top panel of the unit)
- 4 **Mounting Holes**
(2) Key-Slot Holes
- 5 **LED Light**
- 6 **Learn Button**
(Inside the Unit)
- 7 **Backup Keys**



» Battery Installation

Always hold the battery connecting cap while disconnecting or attaching the battery. Do not pull on the power cables as this could cause the power supply to become disconnected from the lock.

STEP 1 - Open the unit using the backup keys provided.

STEP 2 - Reach inside the unit and carefully pull the interior roof foam back to front until the battery holder is exposed. Be sure to not detach the interior foam completely from the unit.

STEP 3 - Connect the recommended 9V alkaline battery following the Positive (+) and Negative (-) guides on the connecting cap.

STEP 4 - When the battery is connected you will hear a single beep, signaling that the unit is powered.

STEP 5 - After you have connected the battery to the cable, you will need to press the battery into the holder for a secure fit.

*** GunVault highly recommends the use of either a Duracell or Energizer 9V alkaline battery with an expiration date of 5 years in the future.**

»» Programming

An access code is a series of entries on the keypad. An entry is a single press of one or more buttons at the same time. Leave the unit door open while you program your safe.

STEP 1 - Open the unit by using provided backup keys or factory default code which is a single sequential press of each button starting from left to right.

STEP 2 - Locate the learn button on the interior roof of the unit.

STEP 3 - Press and hold the learn button. A beep will sound and the keypad backlighting will turn green and remain illuminated. This will indicate the enrollment procedure has been initiated.

STEP 4 - The keypad backlighting will remain activated as you enter the new access code. The code can be a minimum of three entries or a maximum of six entries.

STEP 5 - Press and hold the learn button a second time. A beep will sound, and the keypad backlighting will turn red and remain illuminated.

STEP 6 - Enter your new access code a second time. During this step the red keypad backlighting will remain illuminated.

STEP 7 - Press and hold the learn button a third time. The keypad backlighting will flash green and beep six times confirming that the new code has been accepted. If the keypad backlighting illuminates in red and beeps six times, an error has occurred and you will need to repeat steps 3-7.

STEP 8 - Test your combination to confirm that your unit has accepted your new access code.

STEP 9 - Now you are ready to use your safe.

»» Resetting Passcode

STEP 1 - Open the unit by using either your backup keys or current access code and locate the learn button on the interior roof of the unit.

STEP 2 - Use steps (3-7) in the Programming section to change your current combination.

STEP 3 - Now you have successfully reprogrammed your safe. Test your access code to confirm that your unit has been properly programmed.

STEP 4 - Your safe is now ready for use.

Safety Features

»» Tamper Detection

Entering an invalid access code triggers the Tamper Detect Feature.

STEP 1 - Press and hold down buttons 2 and 3 for five seconds to initiate the tamper detect indicator.

STEP 2 - If tampering has been detected, the keypad backlighting will remain red until buttons 2 and 3 are released.

STEP 3 - If tampering was not detected, the keypad backlighting will remain green until buttons 2 and 3 are released.

»» Low Battery Warning Indicator

STEP 1 - When you enter the correct access code and the battery is low, the keypad backlighting will flash red and beep six times. If the battery in the unit is completely depleted, you will hear only a light humming sound.

STEP 2 - Replace your battery by using steps in section labeled "Battery Installation".

***The low battery indicator only operates when you are in the process of opening your unit.**

»» Security Sleep Mode

After six incorrect entries the Security Sleep Mode Feature will be triggered and will lockout any new keypad entries for two minutes. When Security Sleep Mode is active and a button is pressed the keypad backlighting will flash red and the unit will beep three times.

To verify if the Security Sleep Mode is deactivated, wait two minutes and then test your unit by slowly typing in your passcode. If the keypad backlighting flashes green your passcode has been accepted and the unit will open. If the keypad backlighting flashes red, your passcode is incorrect and you will need to try again. If you have forgotten or lost your passcode, please follow the "Programming" instructions. Your backup key will be required if reprogramming is needed.

»» Internal Courtesy Light

The interior courtesy light feature becomes activated for five seconds after every time the safe door opens. This feature allows you to have a clear view of the interior and all the safe contents.

»» Drawer Removal and Installation

Removal

STEP 1 - Open the unit by using either your backup keys or current access code.

STEP 2 - Identify plastic lever visible through the slot near the center of the drawer.

STEP 3 - Move lever to opposite side of the slot and hold in this position.

STEP 4 - While holding lever in position, pull the drawer away from the unit.

Installation

STEP 1 - Locate slide attached underneath the drawer.

STEP 2 - Locate slide component inside the GunVault unit.

STEP 3 - With spring pointed toward the back of GunVault unit, align and insert slide underneath the drawer into slide assembly inside of the unit until a click is heard.

STEP 4 - The click will indicate drawer is secured and in correct position; with the safe empty of guns and or valuables, verify correct installation by testing drawer's motion.

»» Mounting Your MiniVault

Do not mount the unit with the door facing down, the contents can fall out when the door is opened.

To mount this GunVault product, you will first have to remove the drawer to gain access to the mounting holes. See Drawer Removal on previous page.

STEP 1 - Using the template provided, drill starter holes with drill bits appropriate for your installation on a desired mounting surface.

STEP 2 - Fasten the screws through the paper template key-slot, until there is enough room between the head of the screw and the mounting surface to permit you to glide the unit's mounting plate key-slots over the screws.

STEP 3 - Glide the Mounting Hole Key-Slots over the screws and tighten screws then insert at least one screw into one of the remaining holes to mount the safe in place. A minimum of three (3) screws must be used to mount the safe.

STEP 4 - Your unit is now securely attached to the mounting surface.

»» Optional Security Cable

"Knock-outs" are provided on both sides of the unit to permit attachment of the Security Cable. To remove the knock-out, use a punch or nail set and a hammer. Before inserting cable mount, be sure to remove the small metal knock-out tab from your safe. Do not allow this small metal piece to remain inside your safe. A pair of needle-nosed pliers is recommended when installing the cable's hitch pin.

STEP 1 - First, loop the end of the security cable through the eye and around a sturdy surface.

STEP 2 - Then, insert the threaded mount through the hole in the safe.

STEP 3 - Hold the mount in place while you slide the star washer over the threaded end inside the safe.

STEP 4 - Secure the nut and tighten.

STEP 5 - Insert the Hitch Pin into the hole to ensure the nut stays in place.

Safes, Accesories and More!

Loving your new GunVault safe and want to purchase more?

Check out our website www.GunVault.com for special promotions, product information and more.

»» SAFE CATEGORIES »» ACCESSORIES »» VITAL INFORMATION

- Digital Safes
- Biometric Safes
- AR Safes
- Security cable
- MagVault
- Downloadable manuals
- How-to video tutorials
- Warranty registration
- Frequently Asked Questions
- and MORE

VISIT OUR WEBSITE FOR FAQ'S, VIDEO TUTORIALS AND MORE.

Safety Warnings

- Always keep your safe closed and locked when not in use.
- Children should not play with, around or in any safe at any time.
- Keep backup keys and access code combinations in a secure place away from children.
- Keep the included high-strength steel security cable in a secure place away from children.
- This safe or any other firearm storage device cannot take the place of other safety procedures, including advising children of the dangers of firearms.
- Keep a record of your key number and serial number in a secure place separate from your safe.
- To enjoy the maximum-security benefits of this safe, it must be mounted in place. Use of this product as a storage receptacle without mounting may compromise security of the safe.
- Do not mount any GunVault product with the door facing down. The contents may fall out when the door is opened.

⚠ WARNING: This product can expose you to chemicals including Di(2-ethylhexyl)phthalate (DEHP) which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [P65Warnings.ca.gov](https://www.P65Warnings.ca.gov)

Important Notices

- The backup key is for emergency use only in the event of fingerprint failure or forgotten passcode. For replacement keys, visit [GunVault.com/key-replacement-form/](https://www.GunVault.com/key-replacement-form/) to complete the online key replacement form. To receive a replacement key, you will need to know the key number associated with your unit. You can find this information on the unit engraved on the key port.
- The manufacturer recommends that you lightly coat the door hinge spring and door latch-loop with quality oil at least once a year. Never spray anything into the latch mechanism as it can damage the safe.
- Do not try to remove the key while in the turned position. This may damage the unit or key.

Firearm Safety

The manufacturer of this product does not recommend, suggest, advise, promote, or otherwise condone the ownership or use of firearms. We at GunVault believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision. GunVault recommends that you obtain as much information as possible on firearm safety. Always handle firearms as if they are loaded and ready to fire. Never drink alcohol or use drugs while operating this safe or any firearm. Never grab your firearm by the trigger when removing or placing in to safe. Always keep your firearm safety mechanism engaged while stored inside the safe. Always follow the firearm safety rules set out by the firearm's manufacturer.

GunVault Exclusive 5 Year Warranty

1. GunVault (the "Company") warrants to the original consumer (the "Purchaser") of any GunVault safe (the "GunVault safe") purchased after January 1, 2014 against any damage caused by fire, burglary or attempted burglary for a period of five (5) years from the date of purchase.
2. The Company warrants to the purchaser that the GunVault safe will be free from defects in workmanship and materials for a period of one (1) year from the date of purchase.
3. These warranties are not assignable or transferable to any other person.
4. Any damage to the GunVault safe as a result of misuse, tampering, abuse, neglect, accident, improper installation, modification, unauthorized service, destruction, or the alteration of the serial number, or use in violation of the instructions furnished by the Company will void this warranty.
5. The sole responsibility of the Company shall be limited to the repair or replacement (in its sole discretion) of any component of the GunVault safe which fails to conform to this warranty at no cost to the purchaser for the period of the warranty.
6. Contact the Company directly to obtain service under this warranty. If it becomes applicable to send a defective product to the Company, a Return Authorization Number must first be obtained from the company. In order to obtain service under this warranty, purchaser must provide the Company with the following items (a) proof of purchase, (b) police or fire department report, (c) photographs of damaged safe, and (d) written testimonial.
7. Products shipped without prior Return Authorization and Return Authorization Number may not be accepted, and the Company will not be responsible for their disposition and/or cost of return to the owner.
8. The Company will not assume any responsibility for any loss or damage incurred in shipping. All return authorized products should include a copy of the original invoice in order for this warranty to be honored.
9. This warranty is not an insurance policy. The Company is not responsible for any manner of damage to or theft of the Purchaser's GunVault safe or its contents.
10. We recommend that the warranty registration be completed online in order to validate this warranty.
11. Any implied warranties that the purchaser may have are limited to the duration of the warranties described above. There are no further warranties that extend or apply beyond the face hereof, and the company expressly disclaims and excludes any and all warranties of merchant ability or fitness for a particular purpose. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
12. Repair or replacement shall be the sole remedy for the purchaser under this warranty. The company shall not be liable for any direct, indirect, incidental or consequential damages, losses or expense arising from the use or misuse of the GunVault safe. Some states do not allow the exclusion or limitations of incidental or consequential damages, so the limitation may not apply to you.
13. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.
14. This warranty is only valid in the United States. If outside of the U.S. we encourage you to contact your point of purchase for further warranty help.



GUNVAULT PRODUCT REGISTRATION

To submit your warranty registration, go to www.GunVault.com/warranty or call our Customer Service Department at (847) 665-1626.

For key replacement visit the GunVault.com/key-replacement-form to complete the online key replacement form. In order to receive a replacement key you will need to know the key number associated with your unit. You can find this information on the unit engraved on the keyport.

**PLEASE FILL OUT THE SECTION BELOW AND STORE
IN A SAFE LOCATION OUTSIDE OF YOUR UNIT.**

THIS IS NOT A REGISTRATION FORM

Safe Model:

Purchased from:

Date of Purchase:

Serial Number:

(This number can be found inside unit)

Key Number:

SAFE QUICK STRONG SMART®



Customer Support Hours:

Monday - Friday 6:00 am - 4:00 pm (PST)

Excluding Holidays *Hours subject to change

(847) 665-1626

© 2021 CANNON SECURITY PRODUCTS

2895 W. Capovilla Avenue Suite 140

Las Vegas, Nevada 89119

GunVault.com